



# How does GeminiX set up automatic start


1. After entering the BIOS interface, select Chipset-South Cluster Configuration

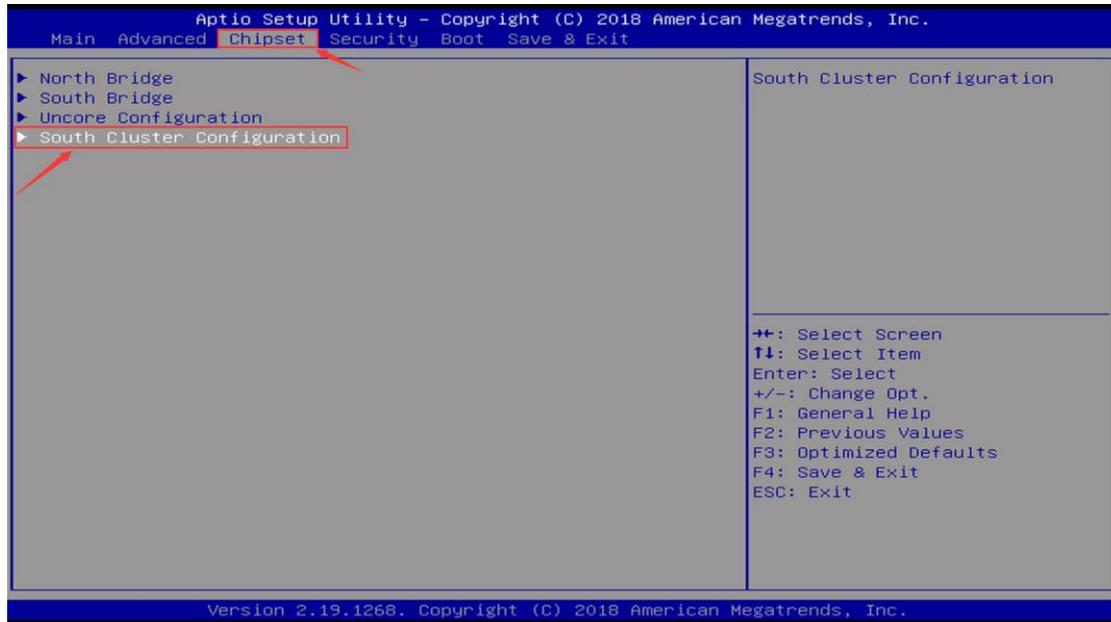


2. Press the enter button to confirm the selection,

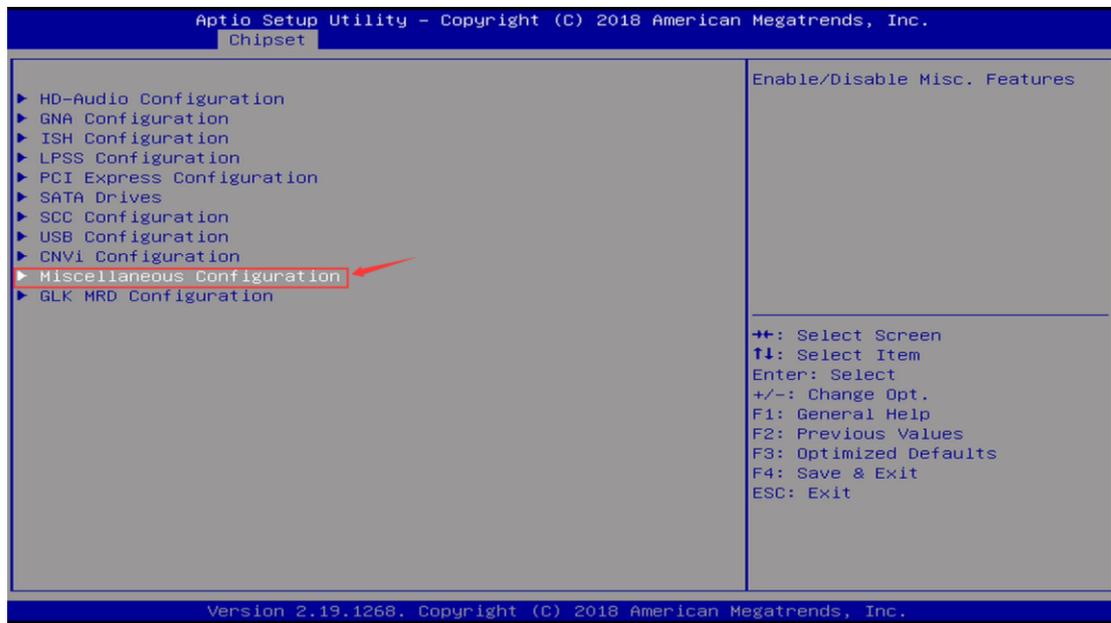

3. Find the Power On Type, press Enter to confirm

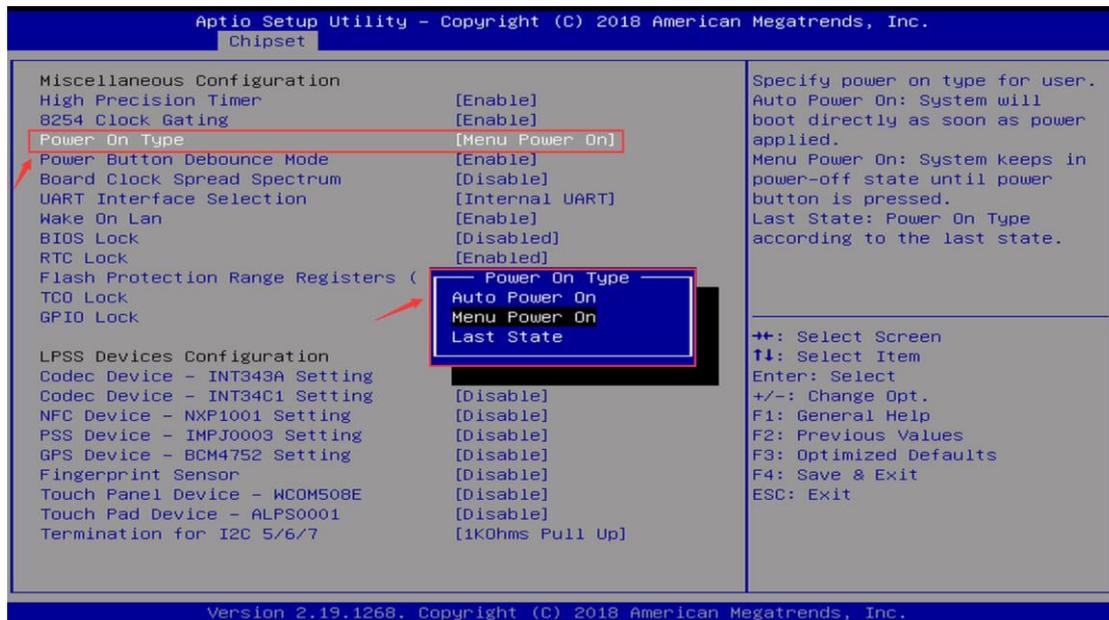

4. Select Auto Power On

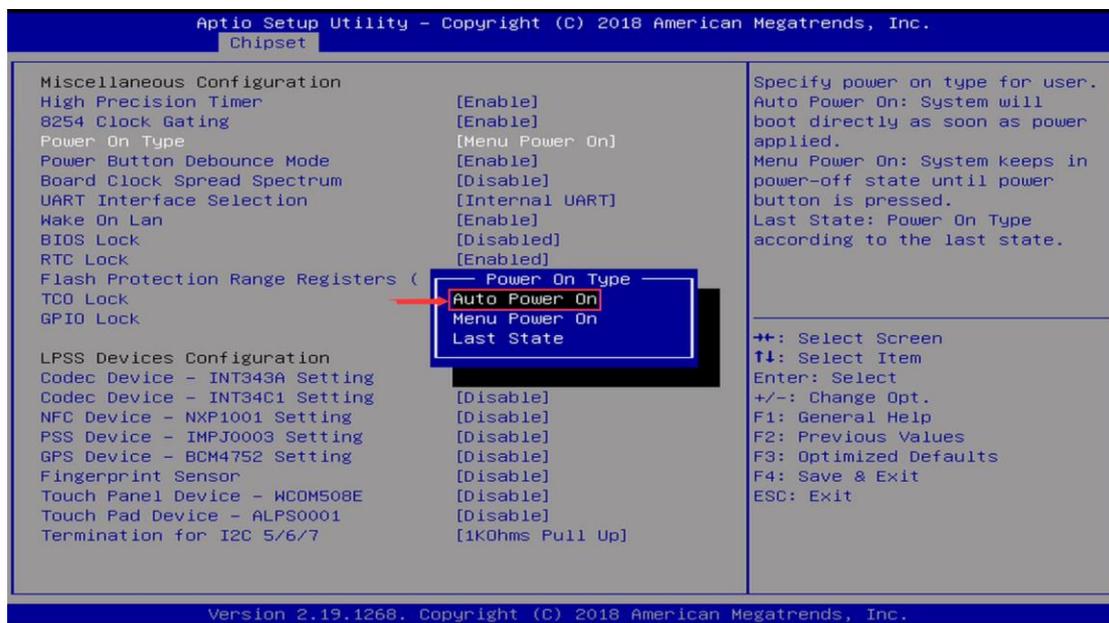

5. Choose YES, Press F4 to save the settings, Successfully set the call to automatically boot

