



MII sets auto power on function

1. After booting, press the keyboard delete to enter the BIOS. Use the keyboard arrow keys to find Boot and select Power On Type.

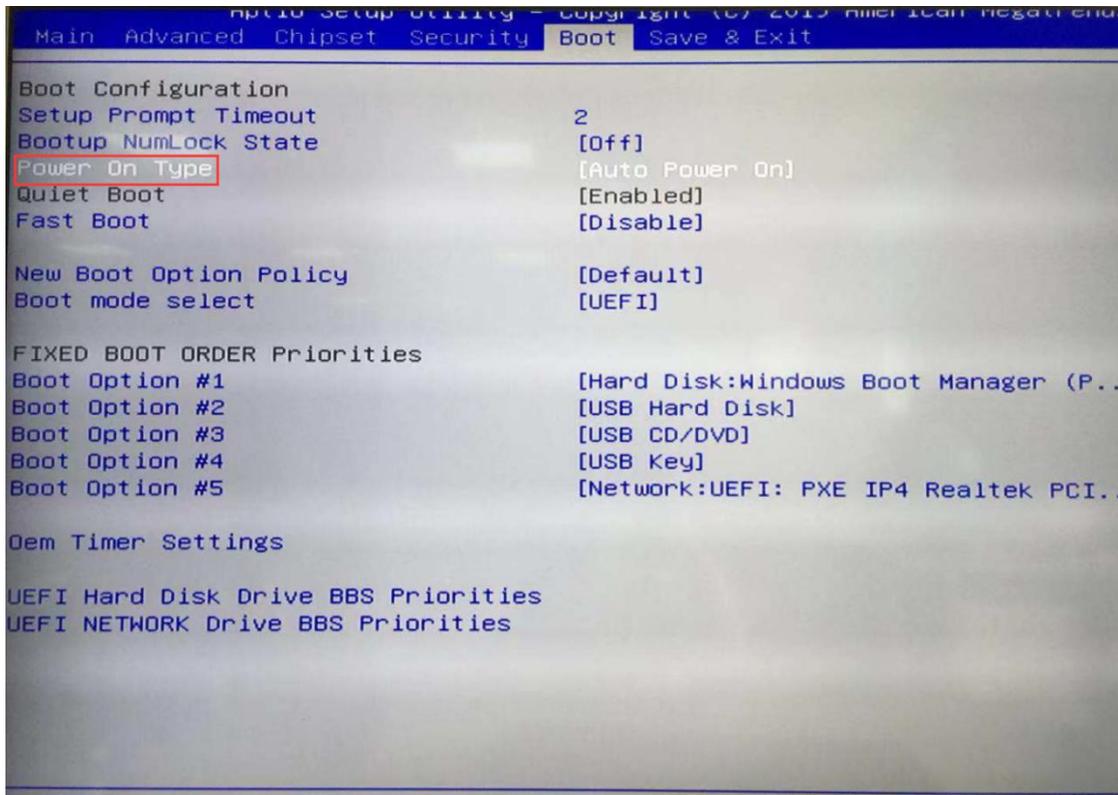

2. Select Auto Power on to enable automatic power on.

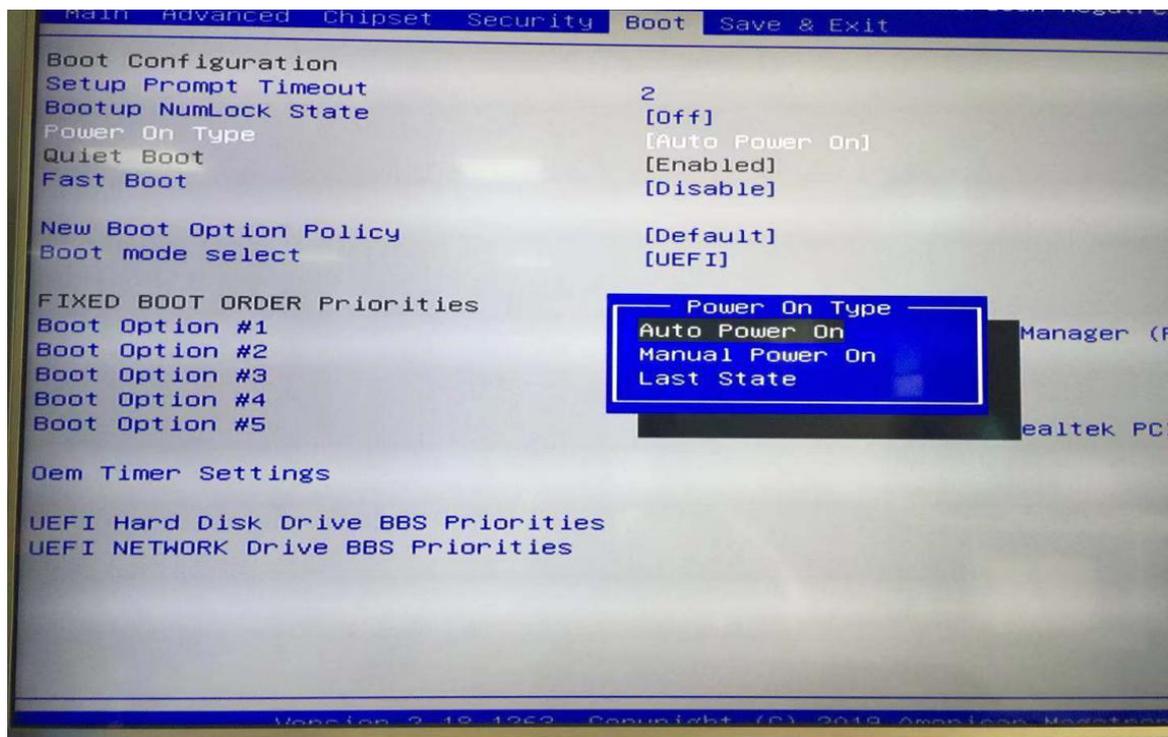

3. Enter to confirm, press F4 to select Yes to save the settings and exit will automatically restart into the system, complete!

