 
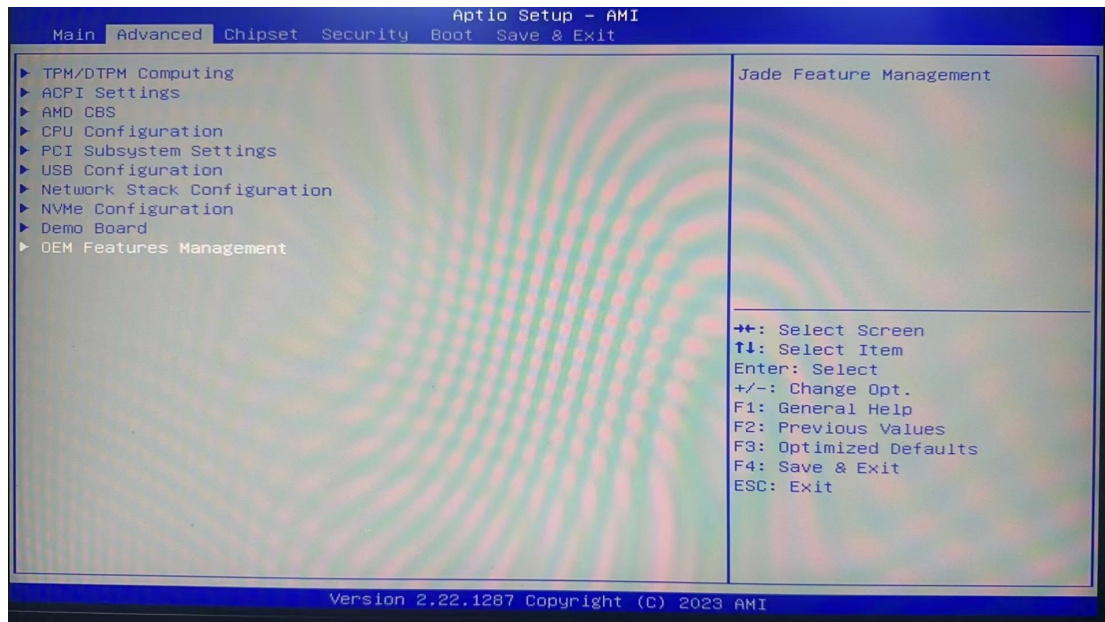 


Change GTR7 (V21) Power Tutorial

1. After turning on the PC, keep pressing the keyboard "Delete", enter the BIOS page, use the keyboard direction keys to find the [Advanced], select the [OEM Features Management].

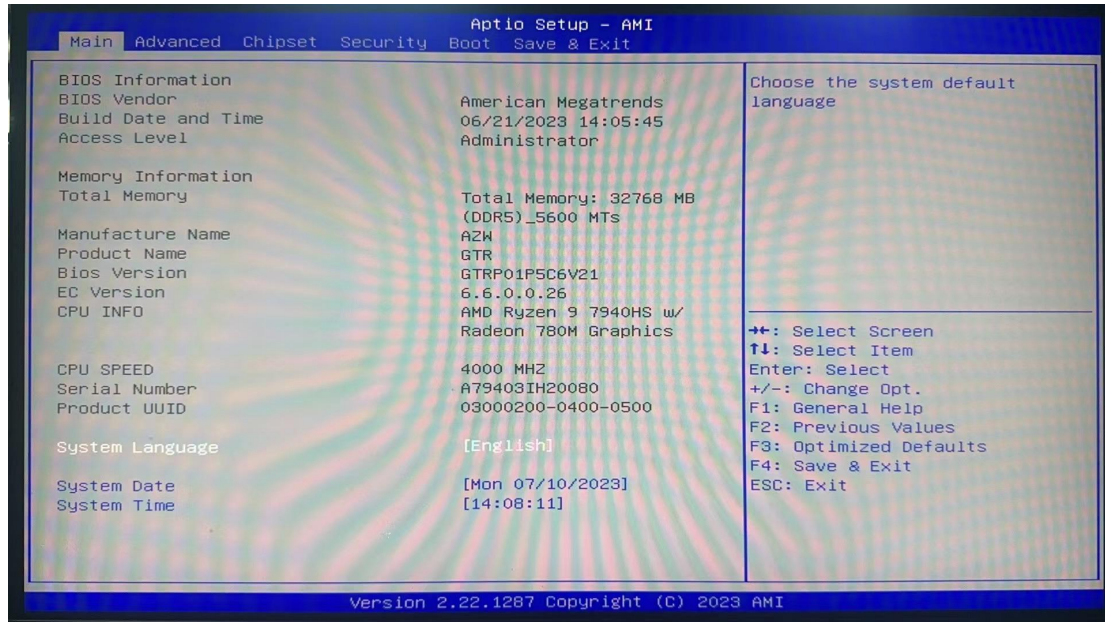 


2. Enter the [OEM Features Management], select to enter the [PowerLimit Setting].

[Balance Mode]=54W

[Performance Mode]=65W

If you want the 54W, please change it to the [Balance Mode]

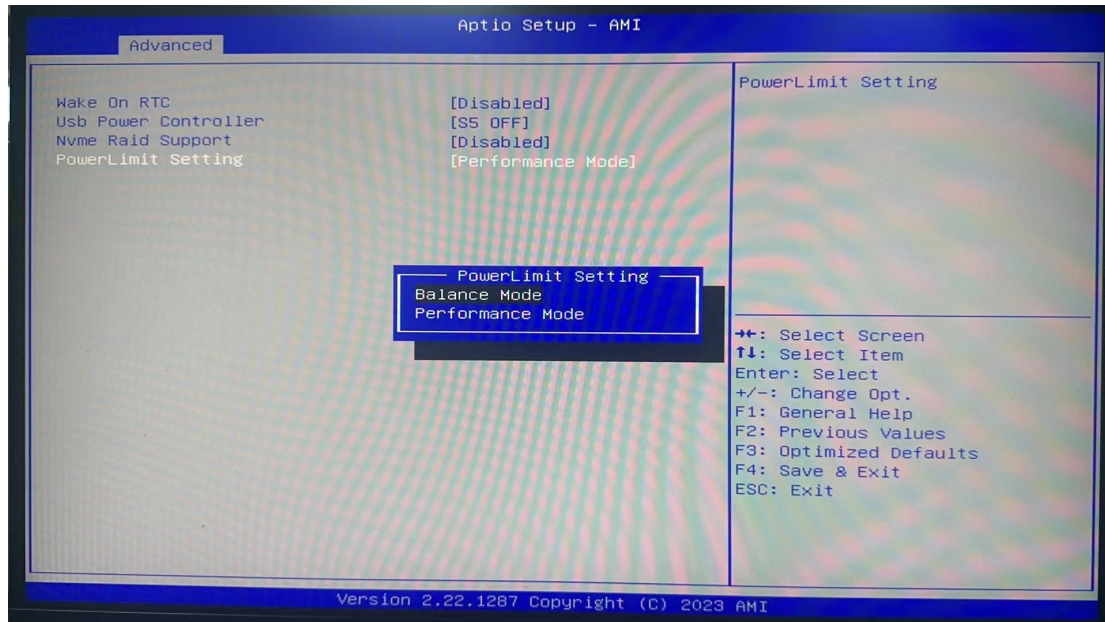

3. Press F4 to save and wait for the computer to automatically restart into the desktop. You could unplug the power supply and plug it back again to test whether the setting is successful.