



How to install Windows 10?


1. Prepare a U disk with a storage capacity of at least 8G
2. Right click and select format... Format U disk to NTFS format, click start to finish formatting

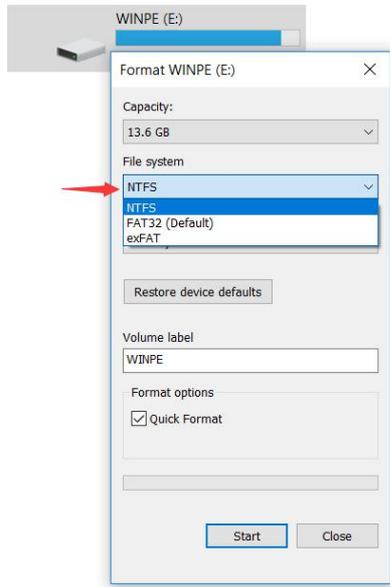


- 3 . Copy your system files to U disk, and it must be in the root directory of U disk.
- 4 . Insert the U disk, boot your mini pc and immediately press F7 repeatedly to enter the boot device menu interface.

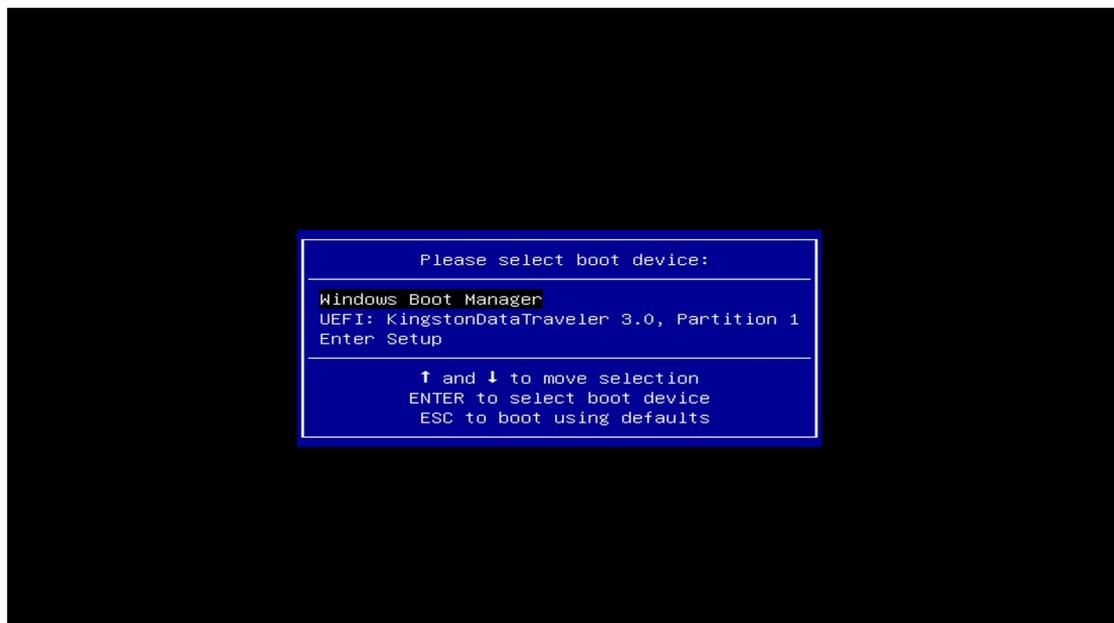

5. Select UEFI and press Enter to enter.

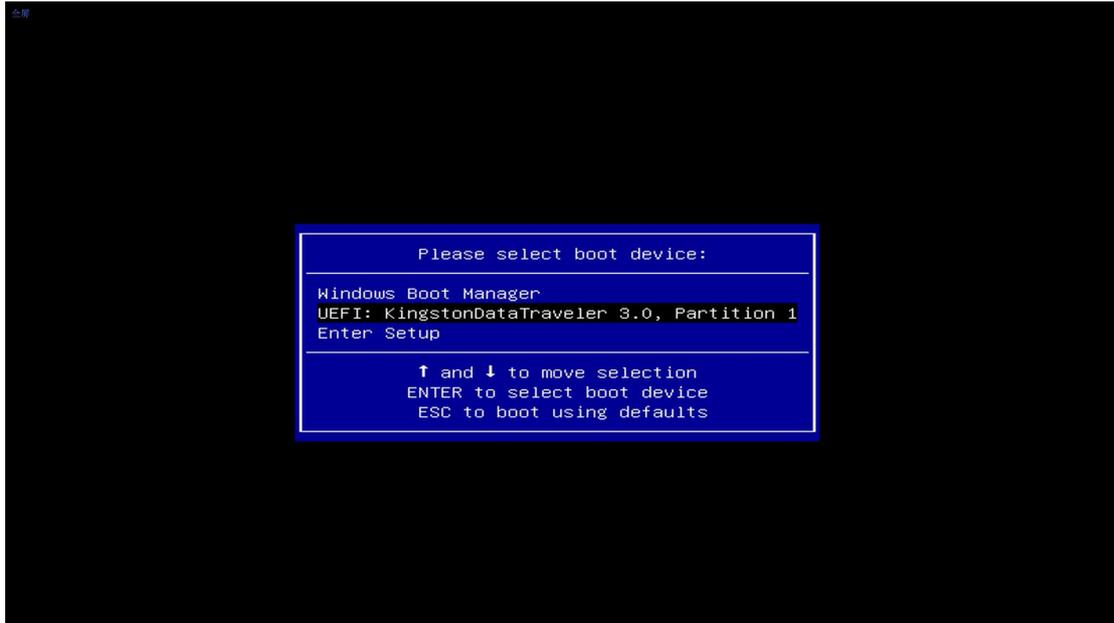

6 . Enter the loading system interface, just wait for automatic loading.

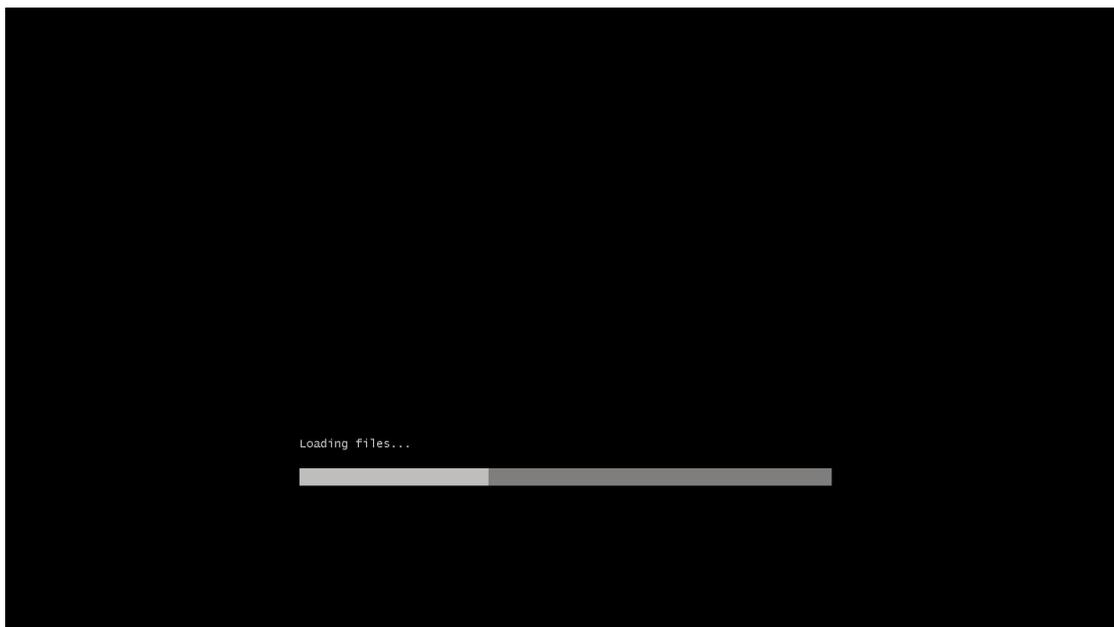



7 . Enter the following loading interface, wait for the installation, until 100% is completed, it will automatically restart into the system (also remove the U disk)

```
X:\windows\system32\cmd.exe - startnet.cmd
call diskpart /s x:\listvol.txt

"Found device with images folder and install.txt file"
Install.wim FOUND at E:\images\install.wim

Making directories...
Image Performance times are being stored in E:\images\PerfApply.txt

*****
Applying the Windows image from the USB with Compact
*****
Elapsed Time is
*****
Applying the Windows image from the USB with Compact and Extended Attributes
*****
Running DISM /Apply-Image /ImageFile:E:\images\install.swm /SWMFile:E:\images\install*.swm /Index:1 /ApplyDir:w:\Comp
act /EA /ScratchDir:w:\recycler\SCRATCH

Deployment Image Servicing and Management tool
Version: 10.0.16299.15

Applying image
[----- 31.0% -----]
```

8. Automatic restart into the factory mode interface, the select OK , The machine will restart automatically, enter the system to start setting, after completing your settings, you can use your computer normally , End

