


U59 Pro AOTU poweron

1. The method of entering the BIOS is to press delete all the time at the boot interface. Then enter the Chipset page. Choose the PCH-IO.

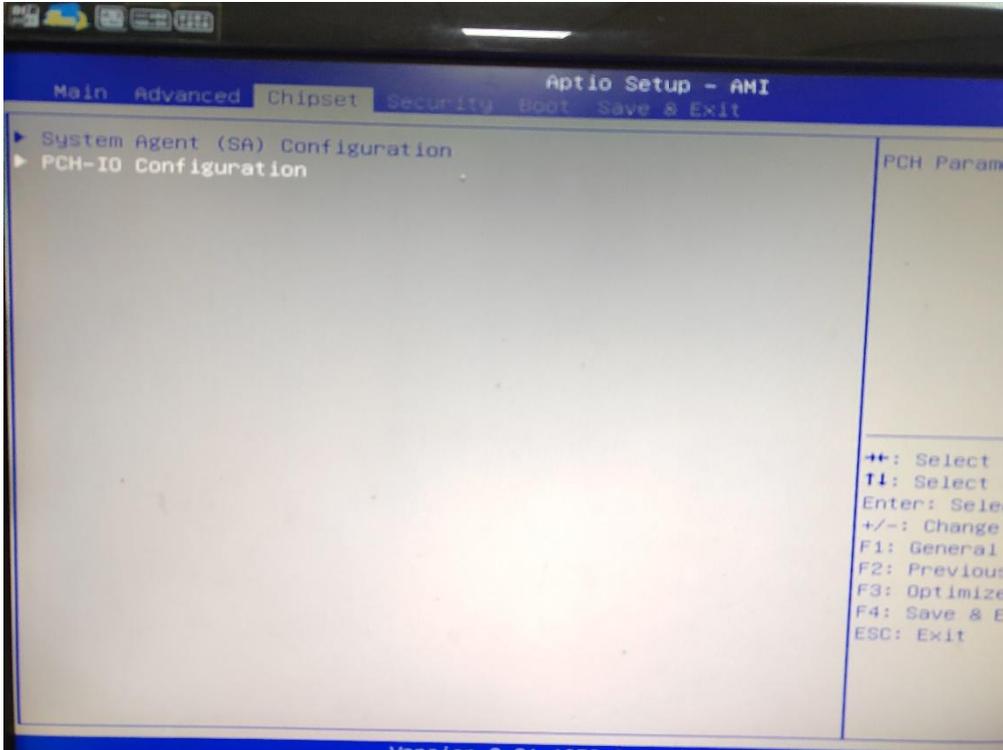

2. Change the State After G3 to S0 state. After set, press F4 to save your setting.

